

How to Measure for Roman Blinds

For Fitting Inside the Window Recess

1. Measure the drop from the top of the reveal to the sill in several places as your window may not be square, and choose the length that best suits. This is the **Finished Drop** of your blind.
2. Measure the width of the reveal at its narrowest point.


We will subtract 1cm from the reveal width; allowing for a 5mm clearance to each side. This gives your **Finished width**. (Please inform us if you have measured an existing blind or have already allowed for clearance).

Note: Complete blackout will not be achieved.

3. Choose a mechanism and to which side this will hang.

Suggested Tip

Ensure that the blind is far enough away from the window handles to prevent obstruction. You may need to fix the blind to the ceiling of the reveal.

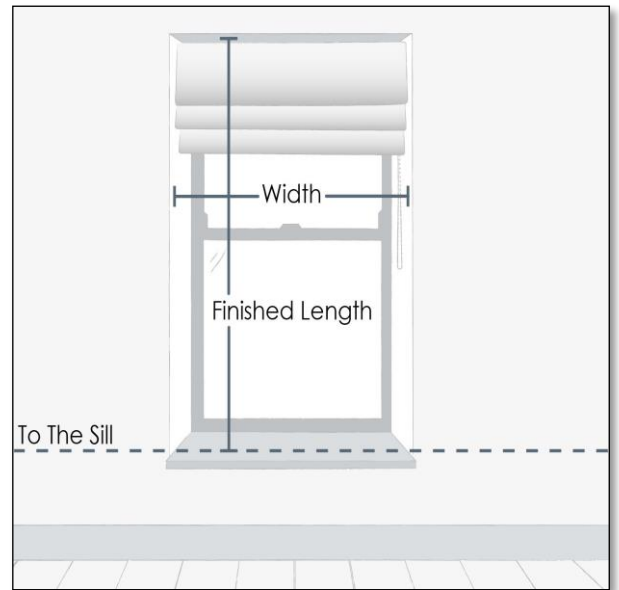

For Fitting Outside the Window Reveal

1. Decide on your preferred blind position. The top of the blind usually looks best at 10cm above the reveal. For the hem position, blinds usually fall 5-15cm below the sill (or to the sill if the sill projects).

Measure the drop between the top of the blind and the hem position. This is the **Finished Drop** (measure in several places to find the length that best suits).

2. Measure the recess width. Now decide how much the blind is to overhang beyond the reveal and add this to your reveal width (usually at least 5cm to each side, check for obstructions). This gives your **Finished width**.

3. Choose a mechanism and to which side this will hang.

